


# GUIDE TO CLEANING WASTE OIL DRAINER PUMP FILTER


## PUMPMASTER 2 - 1:1 SUCTION PUMP

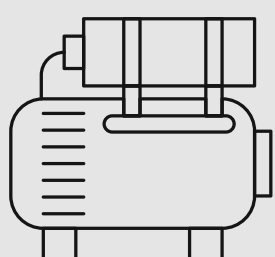

**1**

### DISCONNECT THE AIR


Disconnect your air supply from the pump. Failure to do this will result in you being covered in oil!

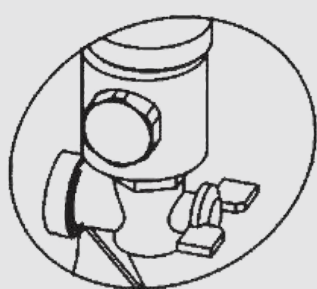

**2**

### TURN THE VALVE OFF


Turn the valve under the pump to the closed position. Horizontal is closed and vertical is open.

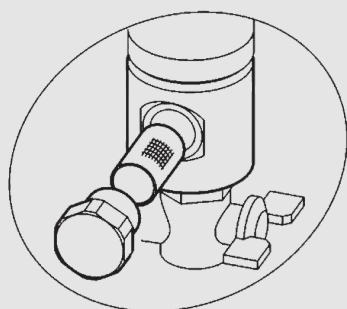

**3**

### REMOVE THE FILTER BOLT

Use a 30mm spanner to unscrew the filter bolt and remove. Separate the gauze filter from the bolt.

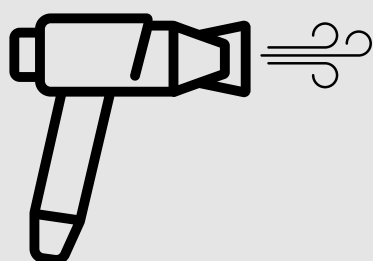

**4**

### CLEAN THE FILTER

Gently clean the gauze filter and blow any excess dirt off.



**5**

### SECURE THE FILTER

To secure the filter back in the pump simply follow step 3 in reverse and ensure you tighten up the filter bolt.

**REPEAT**



**6**

### REPEAT PROCEDURE

Once the pump is run again it may need the above procedure doing again until all the debris has cleared.



**7**

### MAINTENANCE

It is advisable to carry out the cleaning procedure as part of your scheduled equipment maintenance. This will help keep your waste oil drainer in tip-top condition.