

Parts and technical service guide  
Guía de servicio técnico y recambio



**EN PVC PULSE METER 1/2"**

**2**

**ES CONTADOR DE PULSOS DE PVC 1/2"**

**5**

## INTRODUCTION

---



**WARNING:** This unit is intended for professional use. Read all the instructions in this manual prior to use.

- The **366 053** meter is an oval gear model pulse transmitter. It is intended for installation in the distribution line and connection to a monitoring equipment.
- It is recommended that the flow rate measured is placed approximately in the middle of the operating range of the meter. Operation with flow near the ends of the operating range may cause a decrease in measurement accuracy.
- The equipment includes a LED indicator of valve opening status (see section "Installation" for proper configuration).
- Mounting, electrical installation, commissioning and maintenance must be carried out by qualified staff.
- Only use the unit for the purposes for which it is intended.
- This unit has not been approved for use in commercial transactions.
- Do not alter or modify the unit.
- Do not exceed the maximum unit working pressure. See page 4, technical specifications.
- Use the unit with fluids and solutions which are compatible with the moist parts of the unit. See the relevant section of the technical specifications.
- Observe the manufacturer's safety warnings for the fluids used.
- The meter has been manufactured with low tolerances in order to ensure high precision over a wide range of flows and viscosity.

## INSTALLATION

---

This equipment is designed to be installed directly in distribution line pipe. The meter has a 1/2" BSP connection at the inlet and outlet. It also includes an inlet flange and a flange at the outlet. Avoid installing the unit between rigid connections to prevent efforts transmission of the pipeline.

It is recommended to install a pressure relief system on the line to prevent damage from thermal expansion.

To prevent damage from dirt or solid particles carried by the fluid is recommended the installation of a 200-mesh strainer at the meter inlet.

For connection to the monitoring equipment keep in mind that the meter generates 320 ppl (pulses per liter) for proper configuration.

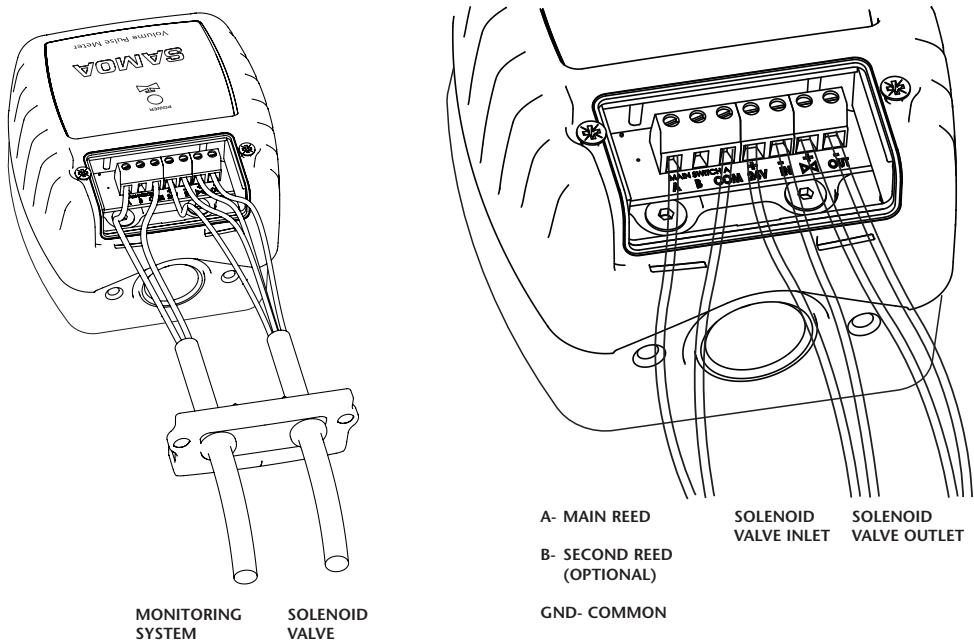
Depending on the monitoring equipment units system, shall be established the following settings:

Monitoring equipment units system		
	Litres	American gallons
Configuration	320 ppl	1211 ppg

Using fluids with high or low viscosity, as well as if working with high flows or very low flows, calibration may be required adjusting pulses per unit.

## INSTALLATION

The electrical connection scheme is shown in the following figure:



The electronic board LED allows quickly display of the open (LED on) or closed (LED off) state of the solenoid valve, if that is installed on the line.

Ensure proper connection to the positive and negative poles of the electronic board. The power supply unit must not exceed 30 V.

The monitoring system responsible for processing the pulses generated will be connected to terminals B, COM and A as follows:

- **COM:** connect the ground wire (GND) of the monitoring system.
- **A:** connect the other wire of the management team. It Transmits pulses from main reed sensor.
- **B (optional):** the pulse generator is equipped with two reed sensors, and if it is allowed by the monitoring system, connect the third wire here.



To ensure proper operation, the cable length between solenoid valve, monitoring system and the pulse generator should be less than 32.8 feet. It is recommended to use at least AWG20 section wire. Always check the status of connections and polarity before operating the equipment.

## TECHNICAL SPECIFICATIONS

<b>Type</b>	Oval gear meter.
<b>Moist part materials</b>	LCP, Stainless Steel, Viton, PVC.
<b>Inlet connection</b>	1/2" BSP and flange.
<b>Outlet connection</b>	1/2" BSP and flange.
<b>Maximum working pressure</b>	30 bar (435 psi).
<b>Compatible fluids</b>	AUS 32 (DEF, AdBlue®), glycol, coolant solutions, water, windshield washer.
<b>Flow</b>	1 - 50 l/min. (depending on the viscosity of the fluid and temperature).
<b>Viscosity range</b>	1 to 2000 cSt.
<b>Operating temperature</b>	-10 °C to 60 °C (14 °F to 140 °F).
<b>Precision</b>	±0.5%.
<b>Pulse ratio</b>	320 ppl (1211 ppg).
<b>Maximum input voltage</b>	30 VDC.
<b>Weight</b>	500 g (1.1 lb).
<b>Dimensions</b>	<p>The diagram shows a top-down perspective view of the flow meter. It has a rectangular body with rounded edges. The front face features a central digital display with the word 'SAMOA' and 'VOLUMETRIC FLOW METER' printed on it. There are two circular ports on the top edge and two on the bottom edge. Dimension lines indicate: a horizontal line across the top labeled '87 mm (3.4 in)'; a vertical line on the right side labeled '67 mm (2.64 in)'; and a diagonal line from the bottom-left corner to the bottom-right corner labeled '93 mm (3.6 in)'.</p>

## TROUBLE-SHOOTING

Symptom	Possible cause	Solution
The meter is inaccurate.	Erroneous calibration factor.	Calibrate the meter.
	A fluid with very high or very low viscosity is being used.	Calibrate the meter.
	Very high or low fluid temperature.	Calibrate the meter.
	The meter is working outside its field of application (see technical specifications).	Restore the working conditions (flow, viscosity, temperature...) to those required by the meter.
Reduced flow.	Dirt in the measuring chamber.	Clean the measuring chamber.
The meter does not count.	Faulty reed sensor.	Inform technical support.
	Loose connections.	Check connections.
	Worn or damaged gears.	Disassemble the meter and clean or replace gears.

## SPARE PARTS SEE PAGE 8-9

4 836 873 R. 03/23

SAMOA Industrial, S.A. · Pol. Ind. Porcayo, I-14 · Camino del Fontán, 831 · 33392 - Gijón - Spain · Tel.: +34 985 381 488 · www.samoindustrial.com

## INTRODUCCIÓN



**ADVERTENCIA:** este equipo está destinado a uso profesional. Lea todas las instrucciones de este manual antes de su uso

- El medidor 366 053 es un generador de impulsos del tipo de engranajes ovales. Está destinado a su instalación en la línea de distribución y conexión a un equipo de monitorización.
- Se recomienda que el caudal objeto de medición se sitúe aproximadamente en la mitad del rango de operación del medidor. La operación con caudales próximos a los extremos del rango de operación puede causar una disminución de la precisión de la medición.
- El equipo incorpora una led indicador del estado de apertura de la electroválvula (ver apartado "instalación" para su correcta configuración).
- El montaje, instalación eléctrica, puesta en funcionamiento y mantenimiento debe ser llevado a cabo por personal cualificado.
- Use el equipo sólo para los fines a los que está destinado.
- Este equipo no ha sido aprobado para su empleo en transacciones comerciales.
- No altere o modifique el equipo.
- No exceda la presión máxima de trabajo del equipo. Ver página 12 de especificaciones técnicas.
- Use el equipo con fluidos y soluciones compatibles con las partes húmedas del equipo. Ver sección de especificaciones técnicas.
- Atienda las advertencias de seguridad del fabricante de los fluidos empleados.
- El medidor ha sido fabricado con reducidas tolerancias para asegurar una elevada precisión sobre un amplio rango de caudales y viscosidad.

## INSTALACIÓN

Este equipo está destinado a su instalación directamente en la tubería de la línea de distribución. Está dotado de conexión roscada de 1/2" BSP tanto en la entrada como en la salida, así como de brida para realizar el cierre con una junta tórica. Evite instalar el equipo entre conexiones rígidas para no transmitir esfuerzos de la línea de tuberías al mismo.

Se recomienda instalar un sistema de alivio de presión en la línea para evitar causar daños por expansión térmica al equipo.

Para prevenir daños de suciedad o partículas sólidas arrastradas por el fluido se recomienda la instalación a la entrada del medidor de un filtro de abertura de malla 0.077 mm (mesh 200).

Para la conexión al equipo de monitorización receptor de los pulsos generados, tenga presente que se generan 320 ppl (pulsos por litro) para su correcta configuración.

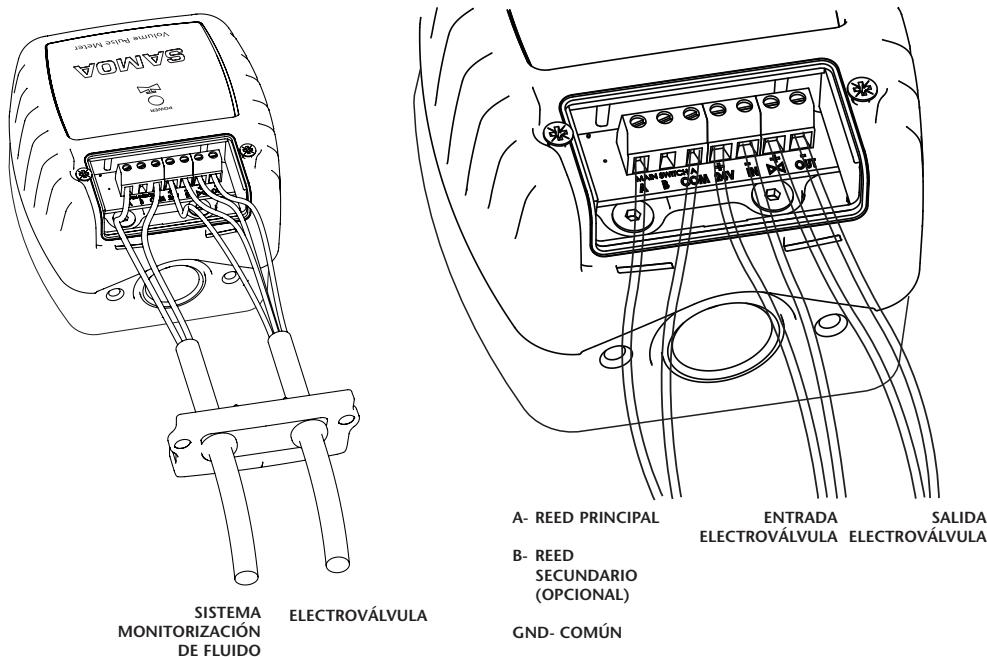
En función del sistema de unidades del equipo de monitorización, se establecerá la siguiente configuración:

<b>Unidades del sistema de monitorización</b>		
	Litros	Galones americanos
Configuración	320 ppl	1211 ppg

El empleo de fluidos de muy alta o baja viscosidad, así como caudales extremos, puede hacer necesaria una calibración mediante el ajuste de pulsos.

## INSTALACIÓN

El esquema de conexión eléctrica se puede ver en la siguiente figura:



- El LED de la tarjeta electrónica permite visualizar rápidamente el estado abierto (LED encendido) o cerrado (LED apagado) de la electroválvula, en caso de que esta se encuentre instalada en la línea. Asegúrese de su conexión correcta a los polos positivo y negativo de la tarjeta. La tensión de alimentación no deberá exceder los 30 V.
- El equipo de gestión encargado de procesar los pulsos generados se conectará a los terminales B, COM y A de la siguiente manera:

- **Terminal COM:** conectar el cable de tierra (GND) del equipo de gestión.
- **Terminal A:** conectar el otro cable del equipo de gestión. Transmite los impulsos del sensor reed principal.
- **Terminal B** (opcional): el generador de impulsos está equipado con dos sensores reed, y si su equipo de gestión lo permite, conecte aquí el tercer cable.

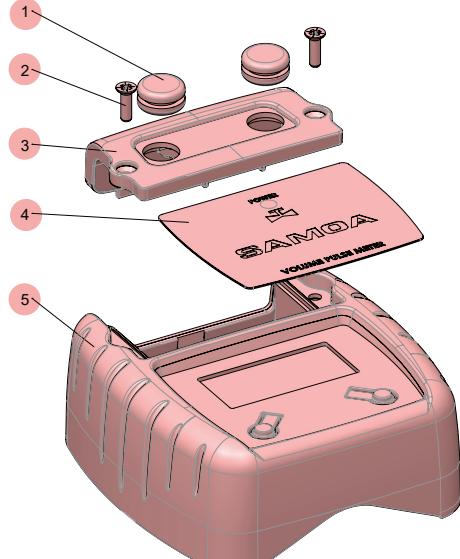
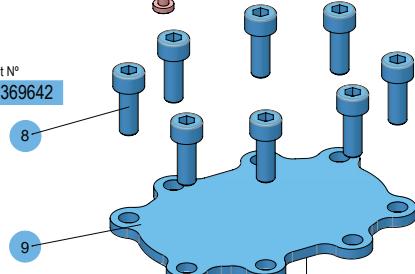
## ESPECIFICACIONES TÉCNICAS

<b>Tipo</b>	Medidor de engranajes ovales.
<b>Materiales partes húmedas</b>	LCP, acero inoxidable, Viton, PVC.
<b>Conexión de entrada</b>	1/2" BSP y brida.
<b>Conexión de salida</b>	1/2" BSP y brida.
<b>Presión máxima de trabajo</b>	30 bar (435 psi).
<b>Fluidos compatibles</b>	AUS 32 (DEF, AdBlue) glicol, líquidos refrigerantes, agua, limpiaparabrisas.
<b>Caudal</b>	1 - 50 l/min (dependiendo de la viscosidad del fluido y temperatura).
<b>Rango de viscosidad</b>	1 a 2000 cSt.
<b>Temperatura de operación</b>	-10 °C a 60 °C (14 °F a 140 °F).
<b>Precisión</b>	±0.5%.
<b>Ratio de pulsos</b>	320 ppl (1211 ppg).
<b>Tensión máxima de alimentación</b>	30 VDC
<b>Peso</b>	500 g (1.1 lb)
<b>Dimensiones</b>	<p>The diagram shows a top-down perspective view of the flow meter. It has a rectangular body with rounded edges. The front face features a central digital display screen with the brand name 'SAMOA' and the text 'VOLÚMETRO PARA FLUIDOS'. On the left side, there are two circular ports or sensors. On the right side, there is a single circular port. Arrows indicate the dimensions: the height from the bottom to the top edge is labeled '67 mm (2.64 in)'; the width from the left edge to the right edge is labeled '87 mm (3.4 in)'; and the depth from the front face to the back is labeled '93 mm (3.6 in)'.</p>

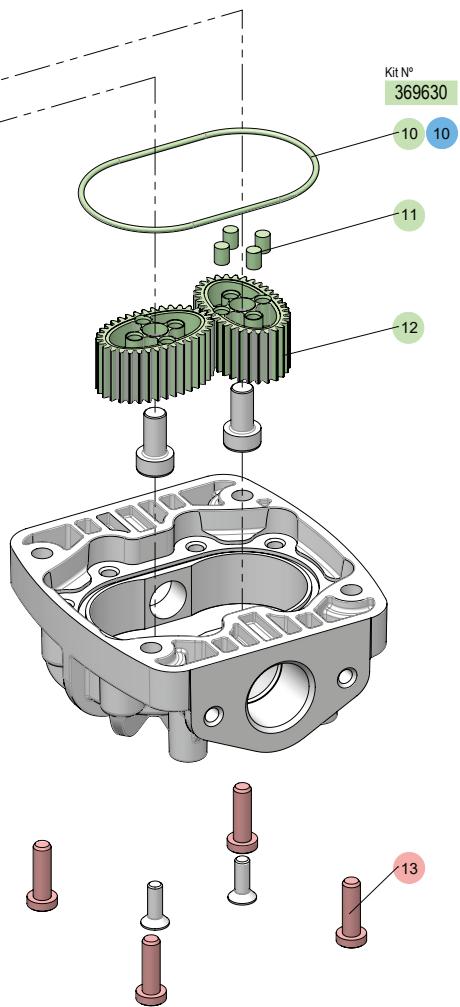
## SOLUCIÓN DE PROBLEMAS

Síntoma	Possible causa	Solución
El medidor es poco preciso.	Factor de calibración erróneo.	Calibrar el medidor.
	Se está usando con un fluido de muy alta o baja viscosidad.	Calibrar el medidor.
	Temperatura del fluido muy alta o baja.	Restituya las condiciones de trabajo (caudal, viscosidad, temperatura...) a las adecuadas al medidor.
Caudal reducido.	Presencia de suciedad en la cámara de medición.	Limpiar la cámara de medición.
El medidor no genera pulsos.	Sensor reed defectuoso.	Avisar al servicio técnico.
	Conexiones flojas o sueltas.	Verificar conexión de los cables.
	Engranajes bloqueados o dañados	Desmontar el medidor y revisar los engranajes para su limpieza o sustitución.

## DIBUJO DE RECAMBIOS EN LA PÁGINA 8-9

SPARE PARTS KITS / KITS DE RECAMBIO / KITS DE REMplacement /  
AUSTAUSCHKITSKit N°  
**369644**Kit N°  
**369642**

2023.03.22-17:30

Kit N°  
**369630****CGI3002.C****8** 836 873 R. 03/23

SPARE PARTS KITS / KITS DE RECAMBIO					
	Part No. Cód.	Incl. Pos.	Description	Descripción	Remarks Observaciones
	369630	10, 4x(11), 2x(12)	Gears Kit	Kit Engranajes	-
	369642	8x(8), 9, 10	Measuring Chamber Kit	Kit Tapa Cámara	-
	369644	2x(1), 2x(2), 3, 4, 5, 6, 2x(7), 4x(13)	PCB Kit	Kit PCB	-

KITS DE REMplacement / AUSTAUSCHKITS					
	Réf. Art. Nr.	Incl. Pos.	Description	Beschreibung	Remarques Bemerkungen
	369630	10, 4x(11), 2x(12)	Kit d'Engrenages	Zahnradsetz	-
	369642	8x(8), 9, 10	Kit de Chambre de Mesure	Messkammer-Kit	-
	369644	2x(1), 2x(2), 3, 4, 5, 6, 2x(7), 4x(13)	Kit PCB	PCB Kit	-

## NOTES / NOTAS

2023 03 22-17:30

10 836 873 R. 03/23

SAMOA Industrial, S.A. · Pol. Ind. Porceyo, I-14 · Camino del Fontán, 831 · 33392 - Gijón - Spain · Tel.: +34 985 381 488 · [www.samoaindustrial.com](http://www.samoaindustrial.com)

## NOTES / NOTAS

## EC CONFORMITY DECLARATION / DECLARATION CE DE CONFORMIDAD

**EN**

**SAMOA INDUSTRIAL, S.A.**, Pol. Ind. Porceyo, I-14 · Camino del Fontán, 831 · 33392 - Gijón - Spain,  
declares that the product(s): **366 053** conform(s) with the EU Directive(s): **2004/108/CE**

**ES**

**SAMOA INDUSTRIAL, S.A.**, Pol. Ind. Porceyo, I-14 · Camino del Fontán, 831 · 33392 - Gijón - España,  
declara que el(los) producto(s): **366 053** cumple(n) con la(s) Directiva(s) de la Unión Europea: **2004/108/CE**

For **SAMOA INDUSTRIAL, S.A.**  
Por **SAMOA INDUSTRIAL, S.A.**



**Pedro E. Prallong Álvarez**  
Production Director  
Director de Producción